The Wallaby Junior – Assembly Instructions

Assembly Parts list

A. (2) Black Screw Covers
B. (2) 1/4-20 x 2.50 Hex Head Bolts
C. (1) 5/32 Allen Wrench
D. (2) Fender Washers
E. (2) Acorn Nuts
F. (3) 1/4-20 x 7/8 BHCS
G. (2) Thick Black Washers
H. (1) 7/16 Wrench
I. (2) Locking Star Washers

STEP 1 — Threads of Spring; Single Button Screw

STEP 2 — Oversize Holes

STEP 3

STEP 4 — Lifting assembly should be flat against the base when tight.

Step 1: Lay the lifting assembly on a solid surface with the back side up as shown. Notice the single Button Head Bolt and the Threads of the Spring in the assembly union. DO NOT LOOSEN THE SINGLE BUTTON HEAD BOLT.

Step 2: Now notice the (2) oversized holes in the Base Plate. The Single Button Head Bolt and the Threads of the Spring will go into these oversized holes.

Step 3: With the Base Plate over hanging the table about 2 inches, hold the Lifting Assembly above the Base Plate and align the Single Button Bolt and the Spring Threads into the oversized holes. Place one 1/4-20 x 7/8 BHCS through the base plate to screw in the lifting assembly.

Step 4: Insert and thread the other (2) 1/4-20 x 7/8 BHCS through the Base Plate and into the Lifting Assembly. Once all (3) bolts are threaded in, tighten securely with the 5/32 allen wrench. Lifting Assembly should be flat against the Base.

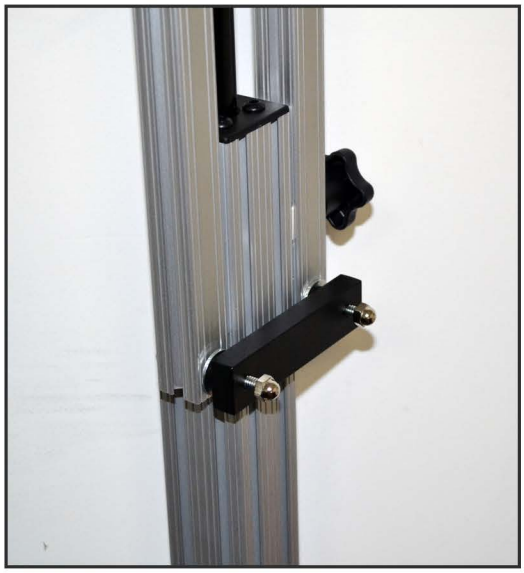

Step 5: Your lifting assembly will have a discardable black horizontal bar on the front of the unit. Unscrew the two silver acorn nuts and remove the black horizontal bar. Also remove the two black thick steel washers, keep the locking washers on the back of the bolt and leave the two fender washers on the front of the lifting assembly.

Step 6: the lifting assembly should appear like the the photo below.

STEP 6 STEP 7 STEP 8

Step 7: Lift the Main Work Surface and guide the bolts through the holes in the horizontal rail.

Step 8: Put on Thick Black Washers and Acorn Nuts. Tighten the Acorn Nuts with the 7/16 wrench.

The Wallaby Junior

The Wallaby Junior is designed to hold your laptop or LCD monitor, keyboard and mouse on the work surface. Your Wallaby is shipped in the down position with work surface brake tightened.

The Wallaby Junior has (1) spring that assist in raising your unit to the standing position and works best when your laptop or monitor and keyboard are in place. This reduces the amount of pressure needed to lower the unit.

Always push down with both hands on the horizontal rear rail when lowering the work surface.

Maximum weight LCD Monitor 12 lbs
Any questions about The Wallaby Junior
Contact us at info@ergodesktop.com

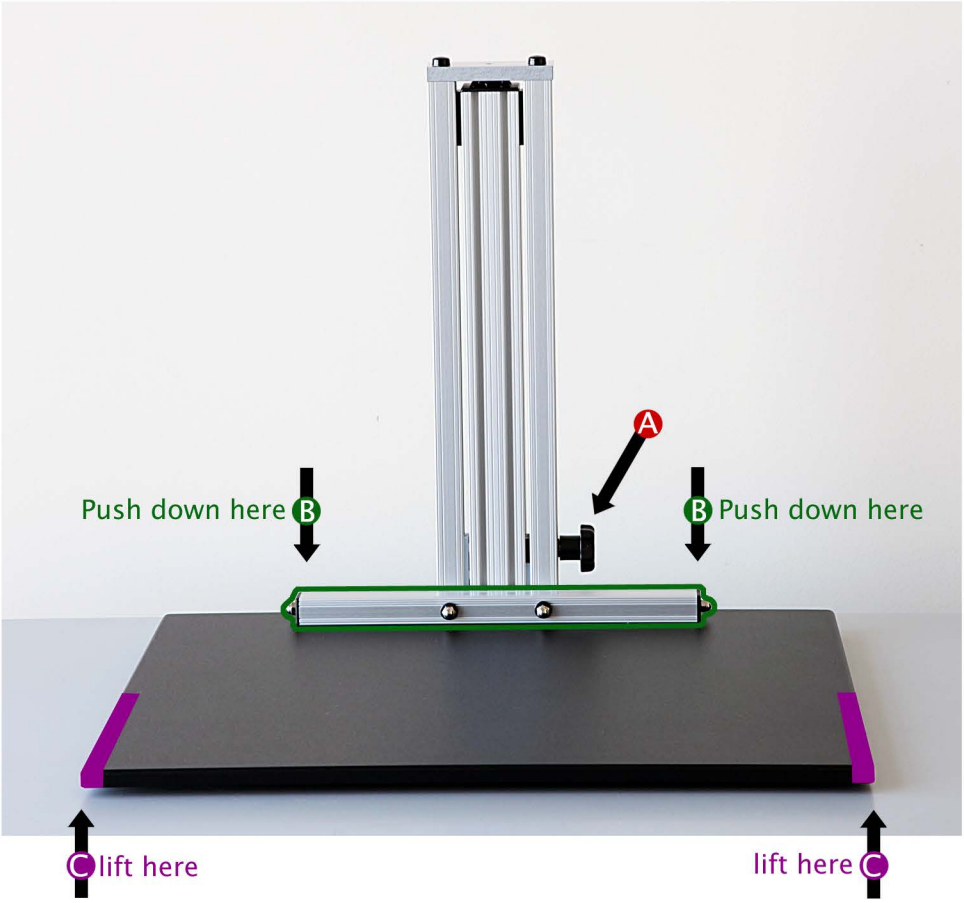

How to Use the Wallaby Junior

To raise the Wallaby Junior, loosen the main brake(A) and lift the main work surface on the sides(C & C).

To lower the Wallaby Junior, loosen the main brake(A) and lean into the unit using your upper body weight pushing down with both hands on the horizontal bar at the rear of the main horizontal work surface (B & B).

A. Main Brake

B. Work Surface Rail

C. Main Work Surface

The Stabilization Leg

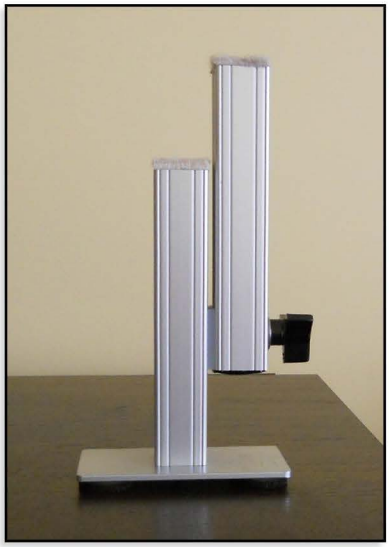

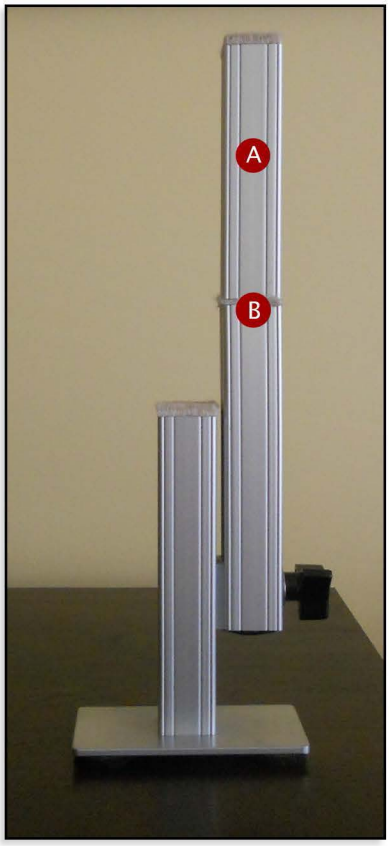

Stabilization leg shown without the Extension Selection

Your adjustable height desk unit comes with an adjustable leg that can be used to give you maximum stability when you are using "The Kangaroo" in the standing position.

Raise The Kangaroo work surface to your desired standing height and tighten the work surface brake.

Place the adjustable leg under the work surface and loosen the adjustable leg brake. Only loosen the brake by a turn or two, to much and the brake will disengage from the slot.

Extend the adjustable leg until it engages the bottom of the work surface and then tighten the adjustable leg brake.

The leg is shipped with the extension section installed to give you additional height adjustment. If this is too tall for your application, simply unscrew the extension section.

A Extension Selection

B screws into here

ALWAYS REMOVE LEG BRACE BEFORE LOWERING THE WORK SURFACE.